



Easy Fiber Instructions

Preparation of the cable


1. Cut off the yellow heat shrink tube at the bottom

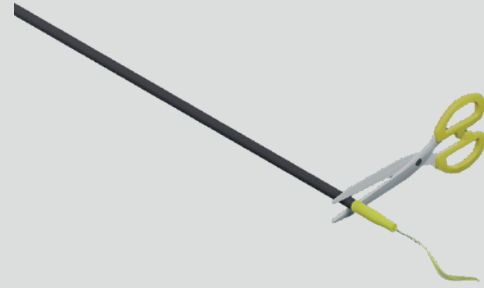


2. Remove the red adhesive tape

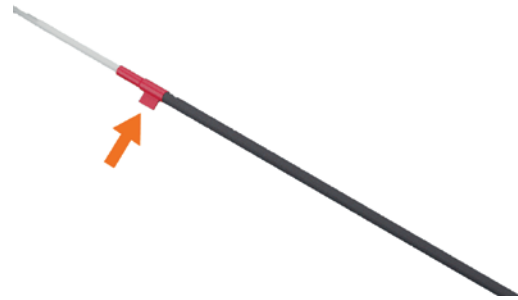

3. Gently slide the sheath along the fiber by gripping the top of the sheath

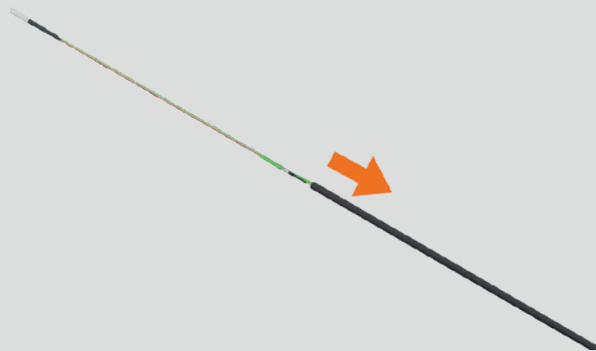

4. Pulling from the two flaps, strip the pre-engraved sheath for the necessary length in order to easily manage the fiber and cut the excess of the sheath and the Kevlar

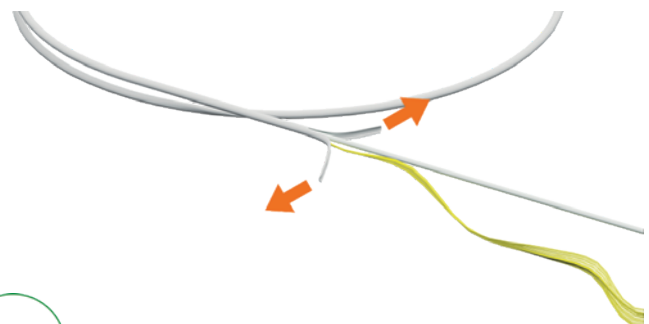


Easy Fiber Instructions

Completion of the SC/APC connector


6. Insert the inner body




7. Insert the flange paying attention to the red mark on the ferrule holder

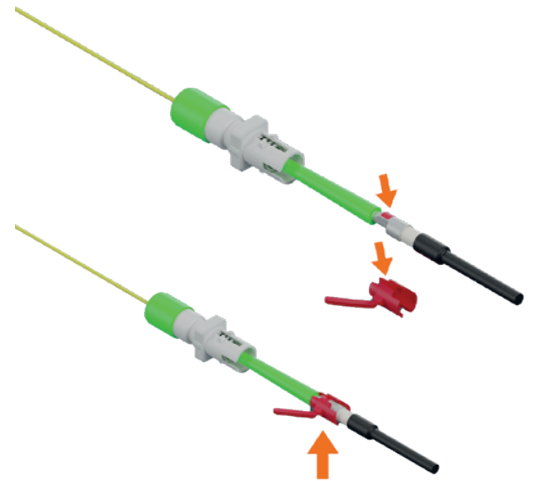


8. Connect the inner body to the flange by aligning the slot of the internal body to the flange tag

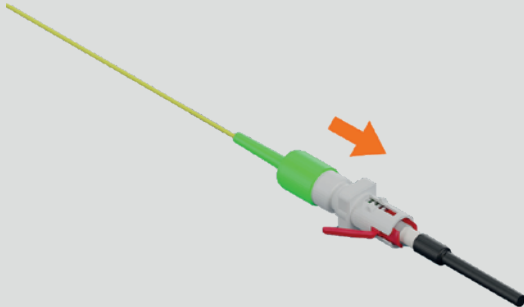

9. Remove the flange tag

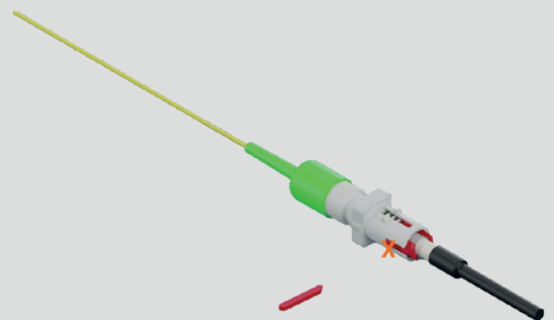

10. Insert the external body by aligning the slot of the internal body with the notch. The connection is successfully completed when you hear the click

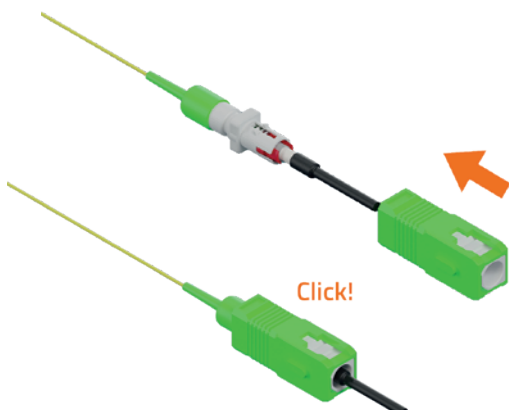

11. Remove the ferrule temporary protection and insert the green cap

